

MICRO HAEMATOCRIT CENTRIFUGE

MK IV

01300-00

SERVICE MANUAL



PART NUMBER FOR THIS MANUAL 01308-00

INDEX

Section	Page No.
1. INTRODUCTION	2-3
2. INSTALLATION	4
3. INSTRUCTIONS FOR USE	5-14
4. FAULT CONDITIONS	15-16
5. ORDERING INFORMATION	17
6. SPECIFICATION	18-19
7. MAINTENANCE	20
8. SERVICE	21-41
9. WARRANTY & SERVICE	42

WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	1


1. INTRODUCTION

This manual contains operating instructions for the following centrifuge

<u>Description</u>	<u>Power</u>	<u>Model No</u>
STANDARD MICRO HAEMATOCRIT CENTRIFUGE MKIV with 24 place standard rotor	240 volts	01300-00

INTENDED USE

The STANDARD MICRO HAEMATOCRIT CENTRIFUGE MKIV is a high speed instrument that permits the quantitative measurement of micro-haematocrits with the aid of a separate measuring device or a reading device placed over 24 place rotor with the aid of a magnifier.

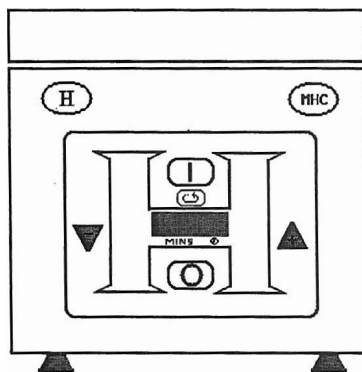

Main components features STANDARD MICRO HAEMATOCRIT CENTRIFUGE MKIV shown in Fig 1. Under the lid it contains a 24 Place standard rotor which holds up to 24 x 75 mm capillary tubes. After centrifugation of tubes, measurement of micro-haematocrits is calculated with the aid of a separate measuring device or a reading device placed over 24 place rotor with the aid of a magnifier.

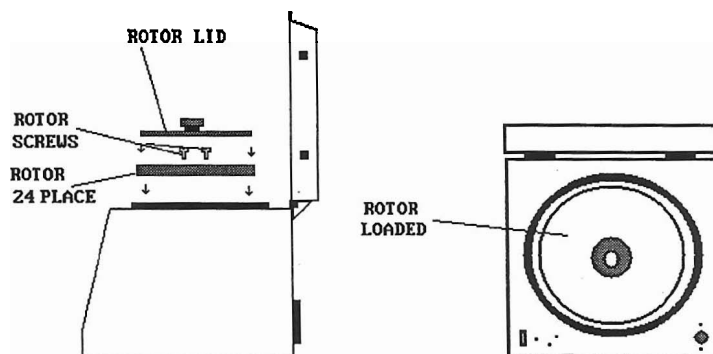


Fig 1


WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	2

INTRODUCTION

METHOD

Whole blood samples are drawn either directly into a capillary tube, containing a suitable anti-coagulant such as heparin, or into a plain capillary tube from a heparinised sample. The measurement is usually made on peripheral venous blood so that the venous PCV is determined. The capillary tubes are now placed in a micro haematocrit centrifuge and the samples spun for the required time. This depends upon the 'G' force applied, but in general a micro haematocrit centrifuge will spin samples for about five minutes at 12,000g and obtain a constant PCV. After spinning the PCV levels can be measured, either in place using a rotary reader or by removing the tubes and using a hand held reader.

$$\text{Haematocrit} = \frac{\text{Reading bottom red cells} - \text{reading top red cells}}{\text{Reading bottom red cell} - \text{reading at plasma meniscus}}$$

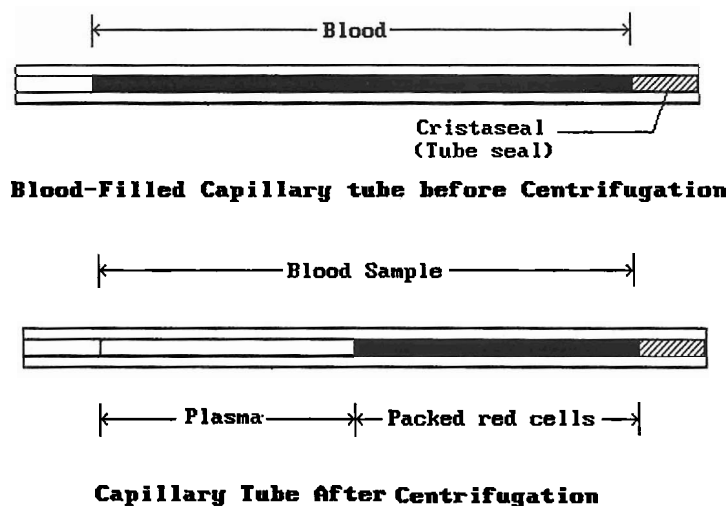

Red blood cells, erythrocytes, of the peripheral blood of man are non nucleated cells which have a characteristic biconcave disc shape. They consist of a concentrated solution of haemoglobin contained in a thin lipo-protein membrane. Their main function is the transportation of oxygen. The term haematocrit is used to express the volume of erythrocytes per 100ml of blood, it indicates the relative proportions of plasma and red cells and the word is often used to mean the packed cell volume, PCV.

During operation the rotor turns at high speed (Approx 12,000 rpm) and this rotation generates a CENTRIFUGAL FIELD which can be used to makes separations. A liquid containing suspended material of a greater density than the liquid will, under the force of gravity allow the suspended material to sediment at the bottom of the tube. If the force is increased to many times that of gravity the sedimentation process is accelerated with larger and more dense particles being deposited first in pellet. Less dense and smaller particles will follow leaving the liquid above the deposited material which is known as supernatant.

WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	3


2.INSTALLATION

INSTALLATION


- 2.1 Inspect packaging for damage. If you suspect damage to the unit, notify the supplier or manufacturer immediately, quoting model and serial number.
- 2.2 Unpack the machine and check the parts against the following list.
1. Instruction Manual.
 2. Centrifuge 220/240 volt.
 3. 24 Place Haematocrit Rotor & lid.
 4. Rotor Screws.
 5. Power cord.
 6. Fuse pack.
 7. 1 Pkt. Heparinised Tubes.
 8. 1 Pkt. Plain Tubes.
 9. Rotor removal tool
 10. Emergency Release Key
 11. 1 Tray Cristaseal
- 2.3. Check that specifications on the rating plate correspond to supply voltage. The rating plate is located on base of centrifuge.
- 2.4. Retain packaging material for further use, should the need arise to return for repair.
- 2.5. Power cord, connect only to an approved power source such as a 3-wire grounded receptacle. Where a 2-wire receptacle is encountered, have it replaced with a properly grounded 3-wire receptacle in accordance with the national electrical code. **Do not, under any circumstances, remove the grounded prong from the power cord.**

Brown = Live
Blue = Neutral
Green/yellow = Earth

WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	4

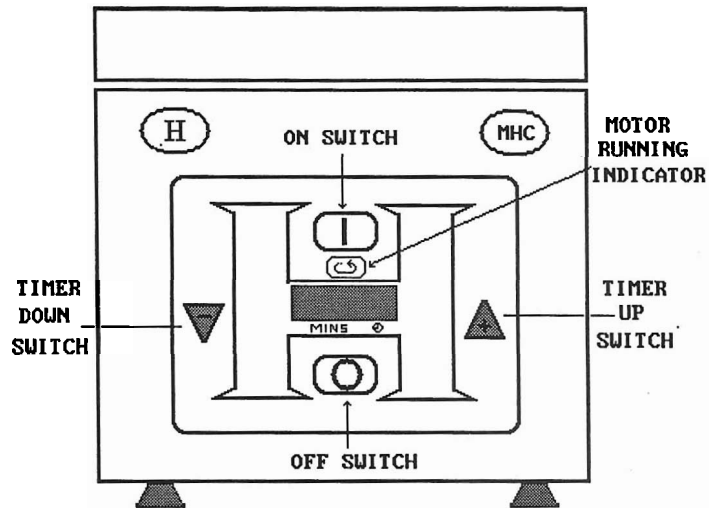3.INSTRUCTIONS FOR USE (cont'd)**3.1. Mains Supply.**

The mains input socket assembly is at the rear of the centrifuge, and comprises a mains input socket, an illuminated on/off switch and fuses for both live and neutral lines. The fuse rating is 3.15amp.

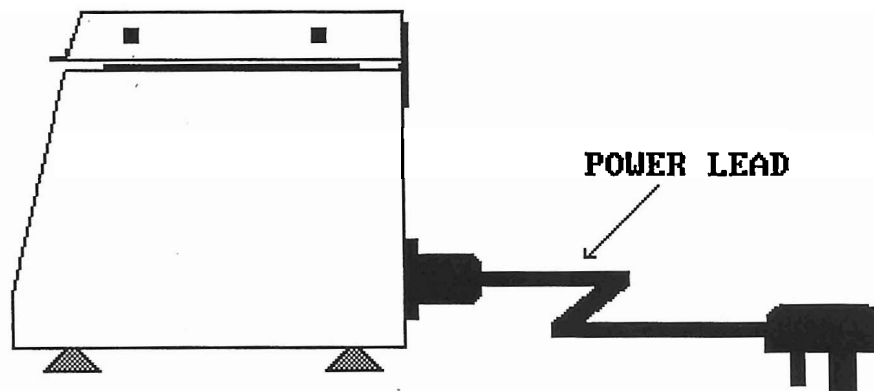


WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	5

3.INSTRUCTIONS FOR USE (cont'd)

ROTOR ASSEMBLY:

- 3.2 Unlock lid and open it to reveal the rotor drive hub location. Assemble rotor on drive hub and align the two screw holes. Insert the two fixing screws provided, tighten them down evenly, spin rotor to check concentricity. Check that the rim gasket is located on inner rotor rim. Move centrifuge to a convenient power source.

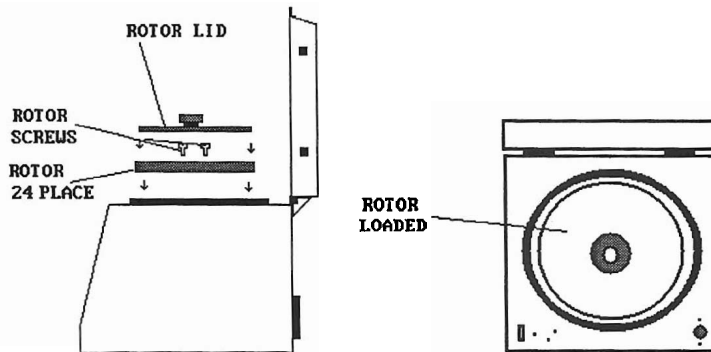

3.3. Time Setting.

The centrifuge running time is set on the front panel using the blue switches on either side of the central digital display.

The right hand switch increases the time and the left hand one decreases it. There are 43 time steps of 5,10,15,20,25,30,35,40,45,50,55, and 60 seconds, then half minute steps up to 15 minutes, and finally 20, 25 and 30 minutes.


The steps can be incremented either by individual pushes of the switch, or else by holding the switch down and allowing the control system to count up or down.

When the centrifuge is set running, the time setting will count down in seconds to zero, when the motor will turn off and rotor braking automatically applied.



3.4 Run.

The green switch marked 'I' starts the centrifuge run sequence in 1 to 5 seconds, once the lid is closed and the time is set. The "running" indicator window is then illuminated to show that the sequence has started.

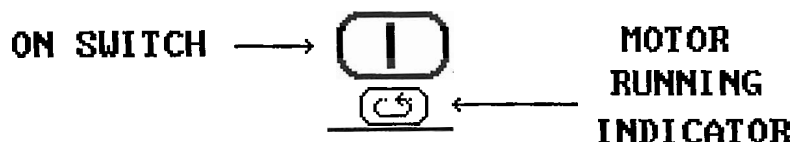


WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	6

3. INSTRUCTIONS FOR USE (cont'd)

3.5 Stop.

Under normal circumstances the centrifuge will automatically stop at the end of the timed run, and indicate that the lid can be opened. If, for any reason, it is necessary to terminate the run during its timed sequence, pressing the switch marked 'O' will immediately turn off the motor and initiate the braking sequence. During the braking sequence the display will show 'StOP'.

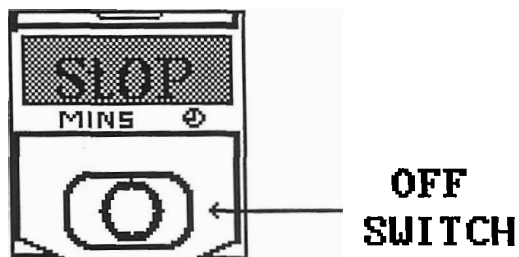


WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	7

3. INSTRUCTIONS FOR USE (cont'd)

TUBE SAMPLE PREPARATION


- 3.6
- Capillary tubes used for centrifugation must conform to British Standard BS 4316 to withstand the forces of centrifugation and give accurate results. Please ensure that the tubes to be used are marked on the packaging "BS4316" or equivalent standard.
 - Take blood into tube by capillary action to within 15mm from the end. Use **HEPARINISED** tubes for direct capillary blood and **PLAIN** tubes for venous blood rendered incoagulable. Avoid air bubbles in the capillary tube and use the guide on the edge of the Cristaseal tray to check the correct blood volume i.e. 40 - 60mm of blood.
 - Seal the unfilled end of the tube with **CRISTASEAL**, holding the tube at a 90° angle to the Cristaseal tray. Push the tube to the bottom of the tray and then twist and remove the sealed tube.

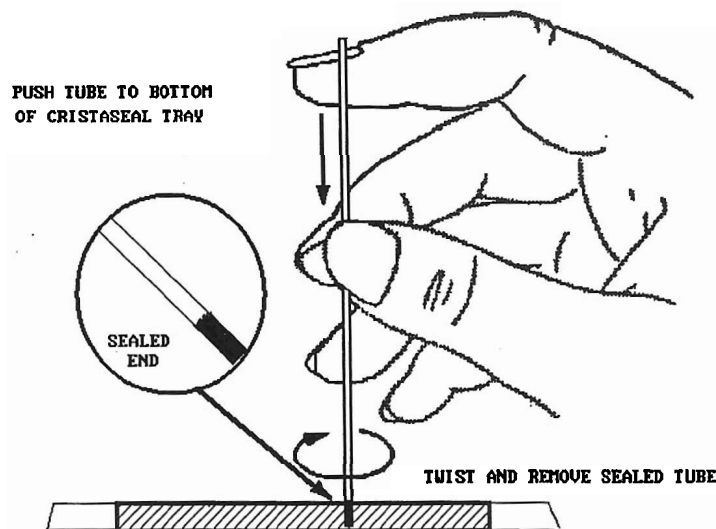

WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	8

4 INSTRUCTIONS FOR USE (cont'd.)

- d). If a capillary tube is broken leaving broken glass in the Cristaseal, the tray must be **SAFELY DISPOSED OF**.
- e). For centrifugation place the tube in numbered slot with sealed end pointing outwards. Make sure the sealed end is actually touching the rim seal gasket. at outer edge of rotor. No balancing of capillary tubes is required due to the high precision of the rotor.

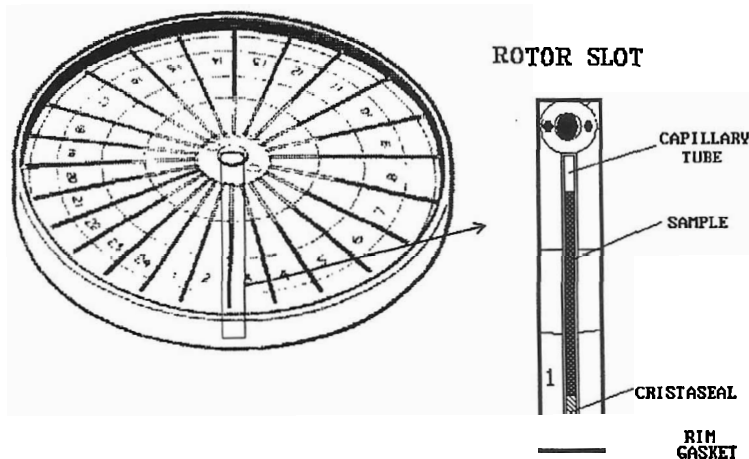


NOTE. The rim seal gasket should be changed at least once a month or sooner if deterioration is evident

- f). Fit the rotor lid and screw down firmly.
DO NOT RUN THE CENTRIFUGE WITHOUT ROTOR LID.

CENTRIFUGE OPERATION

- g). Close centrifuge lid.

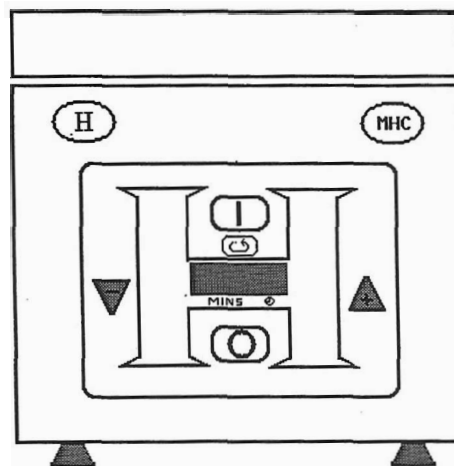


WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	9

4 INSTRUCTIONS FOR USE (cont'd.)


3.7. CENTRIFUGE OPERATION

- 3.8. Connect the power lead to the input socket and a convenient 220/240volt 50Hz supply and switch on. The green power lamp at the rear of the unit will be illuminated.

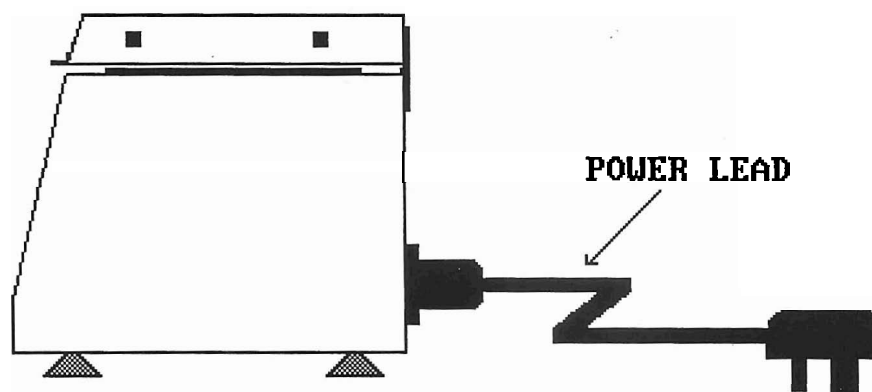


- 3.9. Close the lid and select the desired run time, by pressing the blue switches either side of the central digital display.

Note: The motor will take approximately 70 seconds to reach full speed with the 24 place rotor.

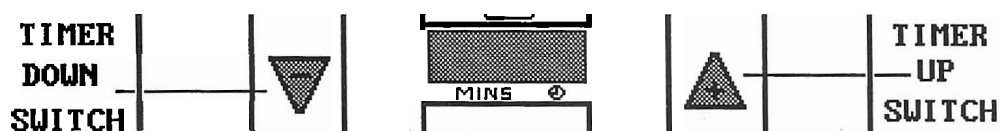

- 3.10. Press the run switch marked 'I'. The centrifuge will run up to speed and the display read-out will count down in seconds. At zero, the motor will be turned off, and the braking sequence engaged.

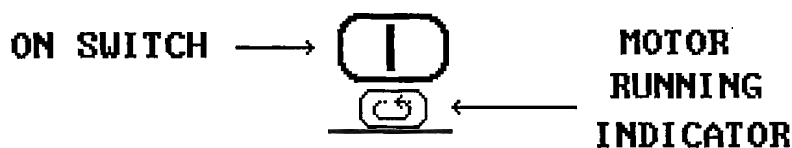

NOTE: If the lid is open, and the "I" button is pressed. This display will show "LID" for two seconds, then the solenoid will shut and the display will show "StOP" stop mode this will take approximately 20 seconds till the display shows " OPEN" then the the solenoid will open.

WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	10

3.INSTRUCTIONS FOR USE (cont'd)

During this period the digital read-out will display 'StOP'.




- 3.11. At the completion of the braking sequence the digital read out will change and display 'Open' and at the same time withdraw the lid locking solenoid.




NOTE: If the lid does not open, press OFF button again. This puts the unit into stop mode to open lid this will take approximately 20 seconds. If this fails see maintenance section for mains failure for opening lid.

- 3.12. The lid can now be raised and the samples removed. Upon opening the lid, the digital read-out will return to the set time, so that repetitive testing is made easier.
- 3.13 If it is decided that the samples should undergo a second run immediately following the first, it is not necessary to open the lid to reset the run time.
- 3.14 **To remove rotor.** Use rotor removal tool (Part No 11592),remove the two screws by the drive hub insert tool between rotor and bowl wall until it clips around rotor then lift evenly until rotor removed.

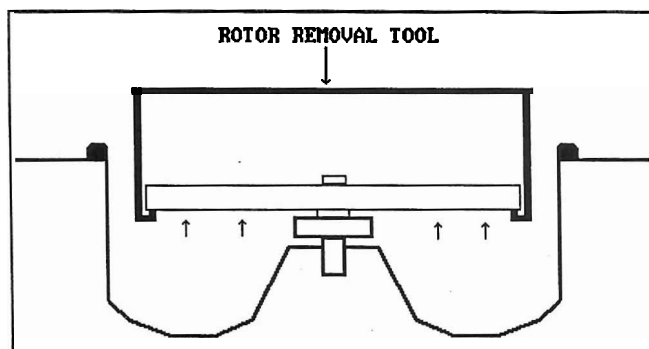

WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	11

3 INSTRUCTIONS FOR USE (cont'd.)

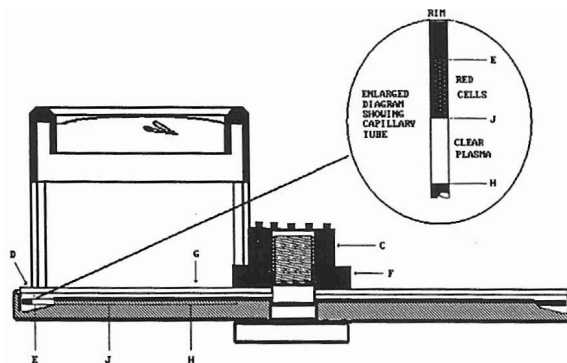**ROTOREADER**


- 3.15. After centrifugation unscrew cover from the rotor.
 Push the **ROTOREADER** firmly on to the central spindle.
 Rotate the centrifuge rotor to bring the required tube to be read nearest to you and restrain from further movement by holding rotor edge.
 By turning castellated knob 'C', the base line (outside black line 'D' on **ROTOREADER**), is brought into line with the base of blood column 'E' (top face of tube seal).
 For the following operations the centre knob remains stationary on the centre spindle.
 Turn the **ROTOREADER** by knob 'F' to the inner spiral black line 'G' to coincide with the top of blood column 'H'.
 Place **MAGNIFIER** onto the rotor reader
 Read off the percentage at boundary of packed cells 'J'.

NOTE: **ROTOREADER** castellated knob is eccentric so that the device will allow for differing depths and types of tube seal.

IMPORTANT: Do not operate the centrifuge with **ROTOREADER** attached to the rotor.

READER

- 3.16 Position tube in slot so that the base of reader intersects base of red cells.
 Move tube holder so that the top line intersects top of plasma.
 Adjust knob so that the middle line intersects top of red cells.
 Read percentage P.C.V.

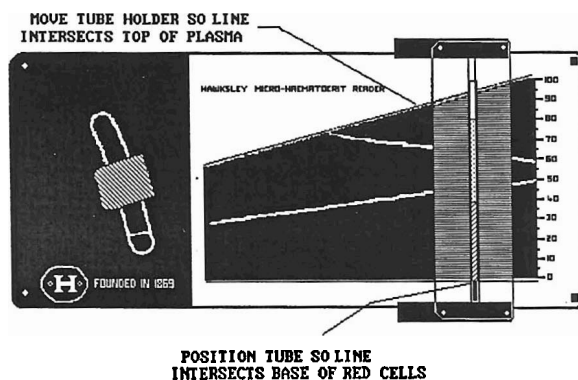

WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	12

3.INSTRUCTIONS FOR USE (cont'd)

PERIODIC INSPECTION, CLEANING AND DISINFECTING

In order to ensure the proper operation of this centrifuge, periodic preventive maintenance is necessary.

INSPECTION

To ensure correct and safe use of the centrifuge, inspect the rotor and lid regularly, using the following procedure:

- a) Remove the rotor from the centrifuge by undoing the two fixing screws located near the drive shaft and remove the rubber rim gasket.
- b) Clean the rotor and rotor lid using the prescribed method detailed below.
- c) Inspect all rotor surfaces for damage, dents, gouges or modifications.
- d) Inspect all rotor surfaces, particularly near the drive shaft and fixing screws, for damage, corrosion, hairline cracks, surface pitting or discoloration of the metal.
- e) If any of the above conditions are found, the rotor must be replaced with a new one.

Never continue to use an impaired rotor because doing so could result in damage to the centrifuge and injury to operating personnel.

CLEANING AND DISINFECTING

NEVER ATTEMPT TO CLEAN THE ROTOR OR ROTOR LID WHILE THEY ARE INSTALLED ON THE CENTRIFUGE

To clean and disinfect the rotor and rotor lid correctly, use the following procedure:

- a) Remove the rotor from the centrifuge by undoing the two fixing screws located near the drive shaft and remove the rubber rim gasket.
- b) Some disinfectants and cleaning agents adversely affect the rotor causing corrosion. **DO NOT USE** Phenolic disinfectants, chlorine bleach solutions, hydrogen peroxide, saline solutions, acids and halogen based bleaches.
- c) Only Ethanol (70%), mild detergents and hot water are recommended.
- d) In cases of extreme contamination, the rotor and lid may be steam cleaned or autoclaved under standard conditions. Remember to remove and dispose of the rubber rim gasket as this will not withstand autoclave temperatures.
- e) After disinfection/cleaning, the rotor and lid should be thoroughly rinsed in hot water, dried and re-inspected for hairline cracks and other defects which might have been hidden by dirt and corrosion.

WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	13

3.INSTRUCTIONS FOR USE (cont'd)**PERIODIC INSPECTION, CLEANING AND DISINFECTING**

- f) The bowl may also be cleaned, whilst the rotor is removed, using the above cleaning methods.

NOTE. If it is necessary to remove the bowl to remove contamination, removal must be carried out by Qualified technical personal.

For details of lid seal replacement please refer to "maintenance section"

- g) Re-attach the rotor to the centrifuge using the two fixing screws, taking care not to damage or scratch the rotor surface. Replace the rotor lid only to finger tightness.

The use of other than genuine Hawksley replacement parts will void all performance claims and warranties.

WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY:J/DINNING	1/7/97	A	0	14

4. FAULT CONDITIONS

4.1. Out of Balance.

4.2 If rotor has not been fixed properly on rotor shaft drive nub, it will not spin evenly and will cause the centrifuge to vibrate.

4.3 The centrifuge can tolerate a certain amount of imbalance, but if it is excessive, the imbalance detector will operate and close the centrifuge down. When this occurs, the motor will be switched off and 'BAL' will be displayed on the digital read-out during the braking sequence.




4.4 This condition can only be cleared by opening the lid and check rotor for uneven running..

4.5. Mains Failure.

4.6 In the case of a mains failure, when the motor is running, the unit must be left for 1 minute to allow the rotor to stop, before overriding the lid locking mechanism and gaining access to the samples.

4.7 The procedure for overriding the lid lock solenoid in the case of an emergency, is to insert the special tool provided, into the small hole in the top left hand corner of the base. Insert tool to push the solenoid back. Once the locking pin has overcome the magnetic field holding it, it will 'click' back into its reset position, and allow the lid to be opened.

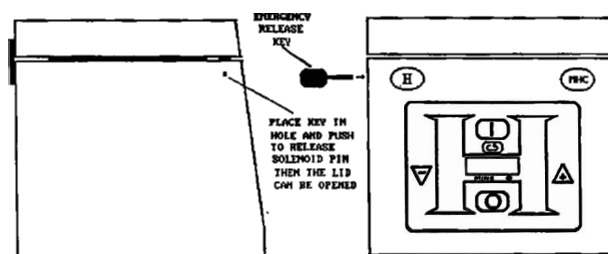

4.8 This procedure should only be necessary if either the mains supply to the unit fails, or else the unit itself fails and blows its mains fuse. The mains fuses are found in the mains input assembly at the rear of the unit, and should be replaced by a 3.15 Amp fuse from the spares pack supplied with the unit. (Further fuses can be supplied - see Accessories, Section 6.)

WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	15


4. FAULT CONDITIONS

4.9. Motor Fails to Start.

- 4.10. If, when the samples have been loaded into the centrifuge, and the lid closed, the motor fails to start and the 'running' light fails to illuminate, then one of four possible conditions has occurred.
- 4.11. A run time has not been set, and the display reads '0000'.
- 4.12. The lid has not been closed properly and therefore the sensing micro switch has not been operated.
- 4.13. The lid micro switch has not operated, and the drive is inhibited. If a 'click' is not heard when the lid is closed, then it is likely that the lid micro switch mechanism needs adjustment. This should only be done by a qualified Technician armed with a copy of the Service Manual for this equipment, or by the Hawksley Service personnel, who may be contacted through the information given in the Specification section of this manual.
- 4.14. The motor brushes have worn down below serviceable limits. and should be investigated only by qualified personnel. The motors used in these units are designed for enhanced performance with long brush life.

4.15 LID FAILURE

Whilst the unit is running, if the lid is lifted the display will show 'LID' for two seconds then will go into stop mode, and it will open normally.

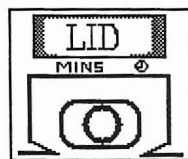

WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	16

5.

ORDERING INFORMATION**CENTRIFUGES (EXCLUDING ROTORS)**

01300-00 STANDARD MICRO HAEMATOCRIT CENTRIFUGE 240V

ROTORS

01810-00 MICROTOR
 01820-00 CHEMROTOR
 01881-00 ROTOR 20 PLACE (ACETAL) 30°FA
 01890-00 ROTOR 8 PLACE (ACETAL)CLOSED FA
 01971-00 ROTOR STANDARD 24 PLACE
 01986-00 ROTOR COMBINATION

ACCESSORIES

01307-00 INSTRUCTION MANUAL MHC MK IV
 01308-00 SERVICE MANUAL MKIV MHC
 01502-00 READER
 01560-00 ROTOREADER AND MAGNIFIER
 01561-00 MAGNIFIER
 01562-00 ROTOREADER
 01503-00 CRISTASEAL (BOX 10 TRAYS)
 01504-00 RIM SEAL GASKET (PKT 20) (01971-00 Rotor)
 01603-00 CAPILLARY TUBES HEPARINISED 75mm(BOX 10 X 100)
 01604-00 CAPILLARY TUBES PLAIN 75mm (BOX 10 X 100)
 01605-00 CAPILLARY TUBES HEPARINISED 75mm(BOX 1000)
 01606-00 CAPILLARY TUBES PLAIN 75mm(BOX 1000)
 01968-00 FUSE 3.15amp (Pkt 2off)
 01989-00 RIM SEAL GASKET (PKT 10) (01986-00 Rotor)
 11767-00 BOWL SEAL

WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	17

6. SPECIFICATION


MANUFACTURER:	Hawksley & Sons Ltd Marlborough Road Lancing West Sussex BN15 8TN England Tel.: 01903-752815 Fax: 01903-766050
MODEL NO:	01300-00
CLASSIFICATION:	Class 1 Equipment
SHOCK PROTECTION:	Type B
DEGREE OF MOBILITY:	Portable
MODE OF OPERATION:	Intermittent
POWER CONSUMPTION:	380w @ 220/240v 50Hz A.C.
FUSES:	F1 & F2 Mains 3.15 amp Quick Blow
MOTOR:	High precision, A.C./DC series wound, brush gear, Class B insulation, Specified to BS 5000 Pt2, rated @ 220/240v 50Hz
TIMER:	Electronic, graduated in 5, 10, 15, 20, 30, 45secs., 1min., and all 30sec. intervals up to and including 15,20,25 and 30mins.
BRAKE	Automatic on completion of timed setting.
SPEED:	11,800 RPM. with 24 place rotor.
R.C.F.:	13,000 x G. with 24 place rotor.
ACCELERATION:	0 - 11,800 RPM. in 70 secs. with 24 place rotor.
WEIGHT:	8.0Kg nett (Less Rotor)
DIMENSIONS:	262mmW x 235mmH x 272mmD

All specifications are accurate at the time of printing and in line with Hawksley's policy of continuous improvement, the right to modify the product specifications described is reserved, without advance notice.

WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	18

6. SPECIFICATION Cont'd.

SYSTEM BLOCK DIAGRAM

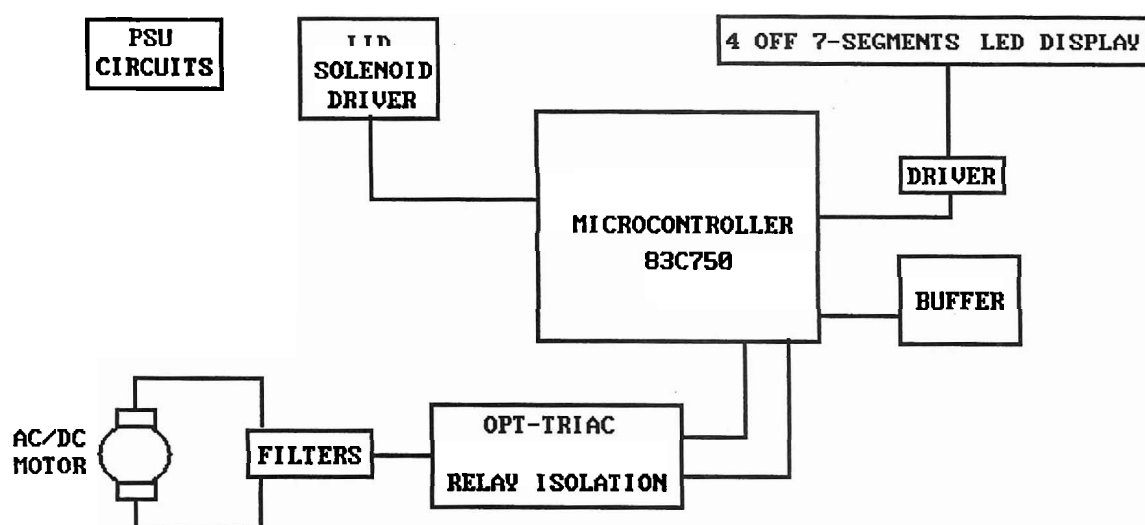


WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	19

7. MAINTENANCE


LID SEAL

Lift bowl and place seal over bowl, then slide seal over rim.

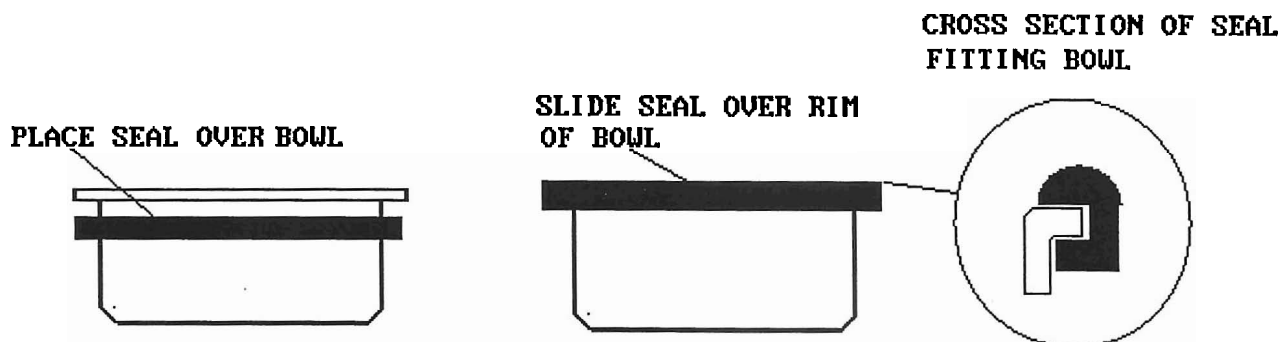

REPLACEMENT OF RIM GASKET.

The rim gasket has no adhesive. Lay strip round the inner rim of rotor. The rim gasket ends will overlap, push ends outwards till ends meet. Ends should meet between any two slots. (Note Rim gasket is supplied at the required length. Do not cut when fitting.)

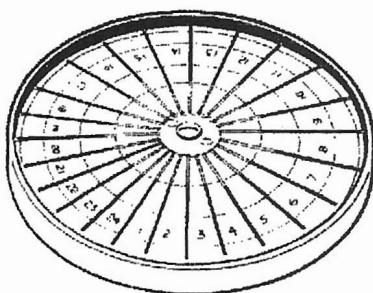

BOWL CLEANING

The bowl may also be cleaned, whilst the rotor is removed, using the cleaning methods on page 14, f).

NOTE. If it is necessary to remove the bowl to remove contamination, removal must be carried out by Qualified technical personal.

WARNING. Switch mains off before removing bowl

WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	20

8.

SERVICE**WARNING**


Before attempting serving or repair, disconnect from power supply. Replacements should be made by trained personnel. For continued safety, Be sure to re-connect any ground wires disconnected during servicing.

To assist with the servicing of centrifuge, the Inner Bowl should be removed to gain access to the following:

	Section	Page No.
1.	Removal of Bowl	21-22
2.	Motor Unit.	23-24
3.	Lid lock.	25
4.	Filter/Mains board and Control PCB.	26
5.	Mains Input assembly	27
6.	Imbalance Microswitch	28
7.	Spare Parts	29
8.	Circuit Diagrams and Components	30-41

1. REMOVAL OF BOWL

- First ensure the centrifuge is disconnected from the electrical power supply.
If the lid is locked insert the emergency release key into the small hole found at the top front corner of the left hand side panel, and push the solenoid locking pin back. Once the locking pin has overcome the magnetic field holding it, it will click back to its reset position and allow the lid to be opened.

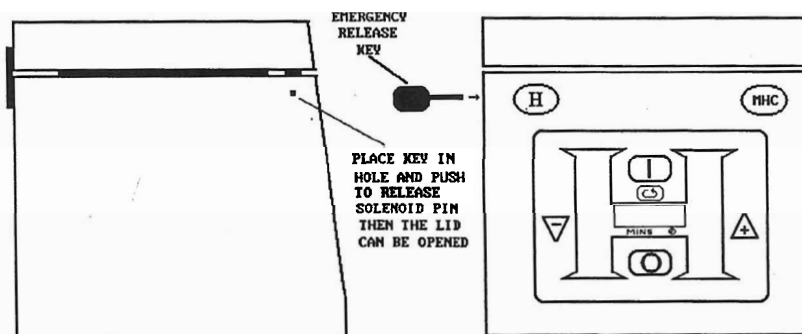


WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	21

8.


SERVICE

To remove rotor. Unscrew rotor lid by unscrewing the knurled retaining nut in a anticlockwise direction, then lift clear.


Locate and remove the two fixing screws that secure the rotor to the drive knob.

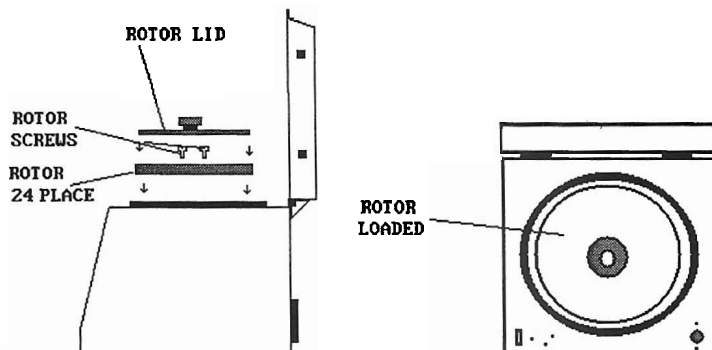

Using the rotor removal tool, carefully withdraw the rotor and store together with its lid and screws in a safe place.

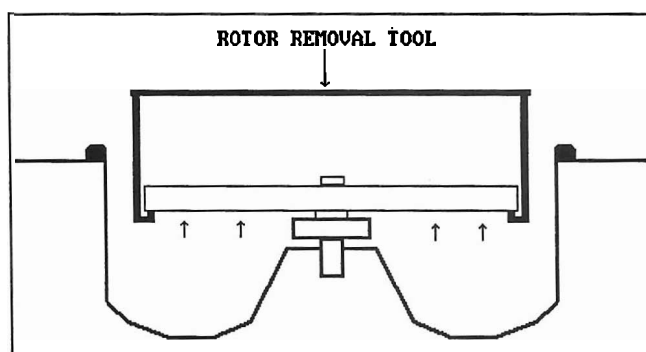

The bowl can now be lifted to reveal earth wire that is attached to the bowl. Unscrew the M5 nut that attaches the earth wire to case, remove wire with washer and nut and lift bowl clear.

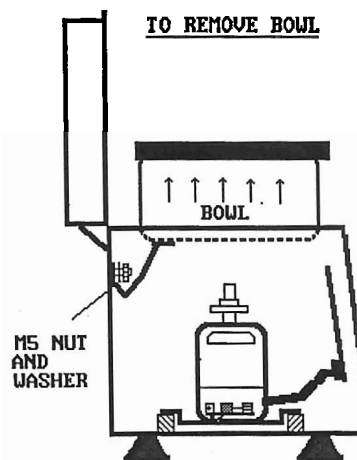

WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	22

8.


SERVICE**2. MOTOR UNIT**

To inspect for wear or replace the motor brushes, remove the motor unit complete with its mounting bracket.

Remove black cover from the control PCB and locate the motor harness plug. Withdraw the plug from the PCB socket.

Unscrew the M5 nut and remove earth wire and washer lead leading from bracket to the earth terminal.

Unscrew, and remove the four M5 nuts and shakeproof washers from the motor bracket. The motor unit can now be lifted clear of its mounts, taking care to avoid the imbalance microswitch.

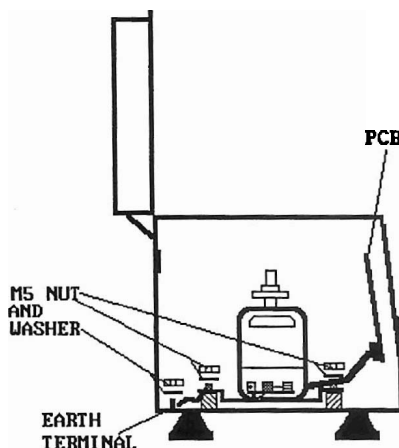**MOTOR BRUSH REPLACEMENT**

At the bottom of the motor remove brush tail holder screw and lift spring to one side. Extract carbon brush or repeat other side of motor.


Excess carbon dust should be removed from motor.

Caution: If low pressure air line is used make sure you are wearing a suitable face mask and goggles.

When replacing or fitting new carbon brushes, care should be taken to ensure that they are a free fit in their holders and the curvature of the brush matches that of the armature.

Refit brush tail and holder screw, then replace spring on top of carbon brush.

Note: New brushes should be given two ten minute runs to ensure "bedding in" of carbon brushes,

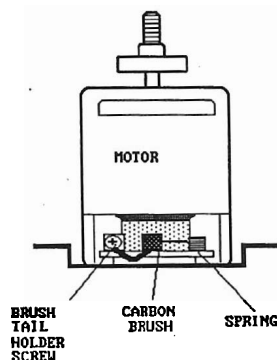

WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	23

8.

SERVICE**1. MOTOR UNIT(Cont'd)**

Replace motor unit

Locate the motor mounting plate on it's four mounts with the motor wires facing the front of unit.

Replace the M5 nuts and shakeproof washers.

Replace the earth wire and secure with M5 nut and washer.

WARNING: This appliance must be earthed.

Replace the harness plug back into the control PCB socket.

Replace the black cover on the control PCB.

Check the imbalance microswitch adjustment.

WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	24


8.

SERVICE

2.

LID LOCK

The lid lock assembly needs no adjustment, it is located at the front left hand side top and held in by three M2.5 x 5mm countersunk screws.

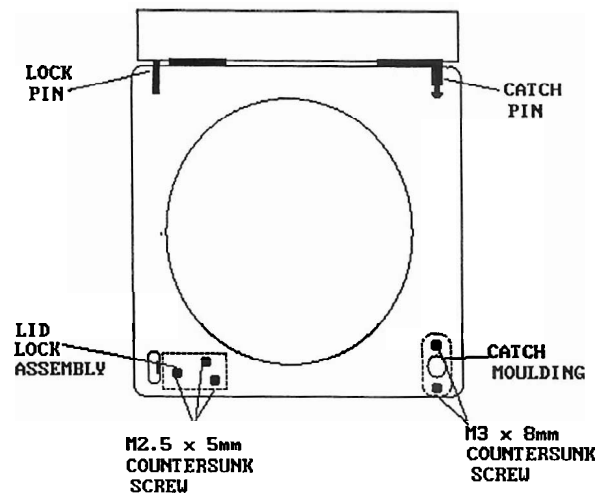
**TO REMOVE LID LOCK ASSEMBLY**

To remove bowl see the section on Removal of Bowl

Remove black PCB cover.

Disconnect plug from control PCB.

Unscrew the three M2.5 x 5mm countersunk screws and remove assembly.

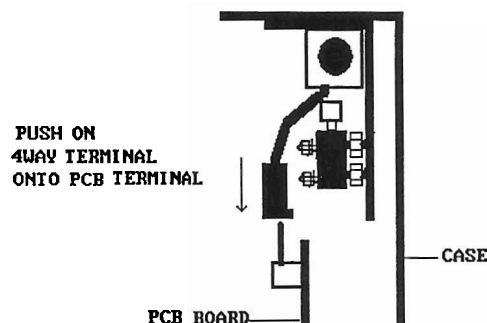**TO REPLACE LID LOCK**

Replace Lid Lock assembly. Screw together making sure before tightening to align plunger to centre of lid lock slot.

Connect plug to PCB.

Replace black cover.

To test lid lock, connect power. Then push 'I' button. This will self test the lid lock. The procedure will take approx 20 seconds.

WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	25

8.

SERVICE**3.FILTER / MAINS AND CONTROL PCB.****TO REMOVE FILTER / MAINS PCB.**

To remove bowl see the section on Removal of Bowl

Remove motor unit see section on Motor Unit (The PCBs can be taken out with motor unit in place)


Remove black PCB covers off Control and Mains /Filter PCB.

Disconnect plugs from control PCB.

To remove Mains/Filter board. On top of nylon stand off there is a little lock tab. This needs to be pushed in. Part of the board is detached one at a time until all stand offs release the PCB.

Lift clear PCB.


To replace Mains/Filter board. Place PCB over the stand off and click into place.

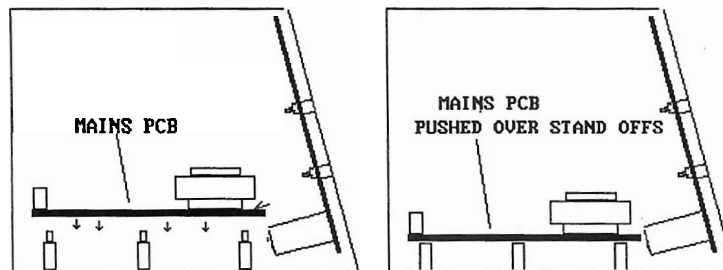

To remove Control board. The Control board is held down by four nylok nuts. Unscrew and lift clear.

(Note: The Control board sits on nylon spacer these are to be kept).

To replace Control board. Make sure the nylon spacers are on the four studs replace PCB board with the connectors at the bottom and screw on the nylok nuts

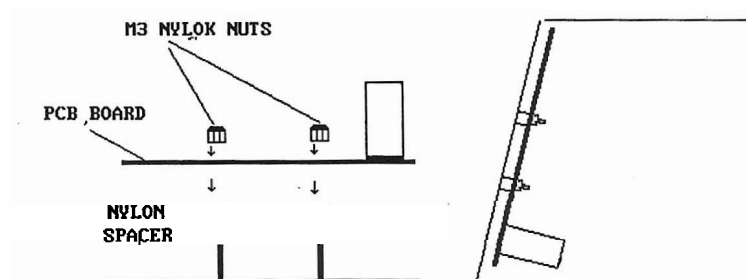

WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	26

8.

SERVICE

4.


MAINS INPUT

Remove black cover over mains input

Peel off the Velcro on the inside, from each side of the input socket.

Disconnect plug from Mains/Filter PCB. Unscrew nuts and washers on earth terminal and remove earth wire and cut all cable ties that hold input socket wires.

Push tabs down that hold the input socket in place, then remove

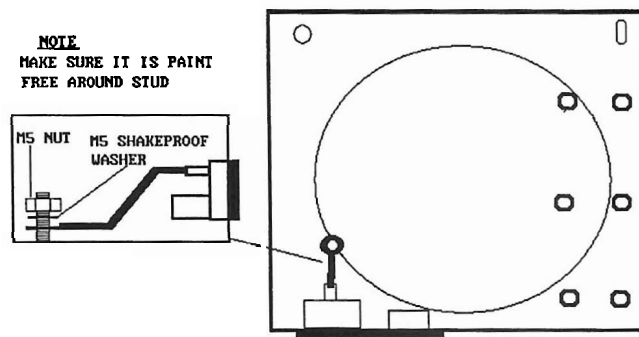


Replace input socket


Replace earth wire from socket held down with a M5 nut and washer first before any other earths are fitted

Plug into Mains/Socket and replace cable ties.

Replace the velcro on sides of socket replace cover.

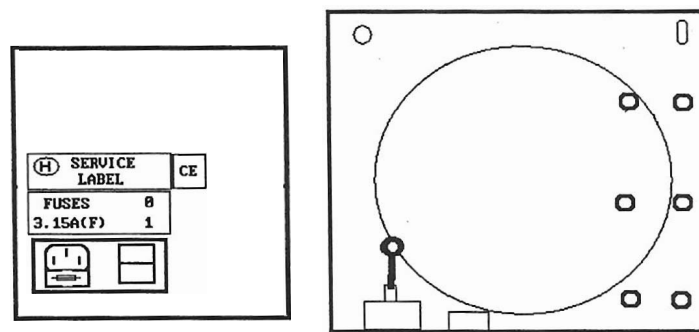

To replace fuses: Pull draw out until the draw tilts down. Remove old fuses and slide in new fuses and close the draw.

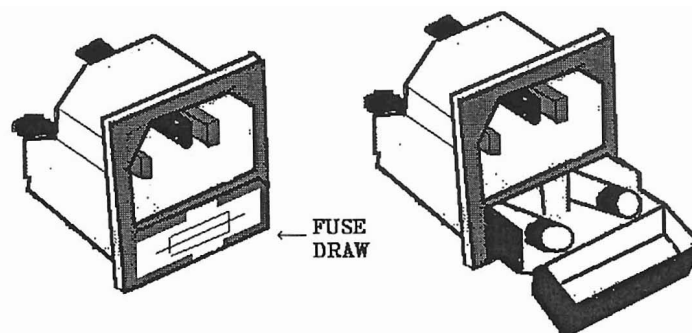

WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	27

8.

SERVICE**IMBALANCE SWITCH**

To remove bowl see the section on Removal of Bowl

Remove black PCB cover.



Disconnect plug from control PCB.

Remove M3 screws and lift microswitch assembly clear

Place into position and secure with M3 screws and washers

Connect plug into PCB.


Adjustment is achieved by bending the roller arm. When the motor moves about 3-4mm before the microswitch is actuated then imbalance is correctly set.

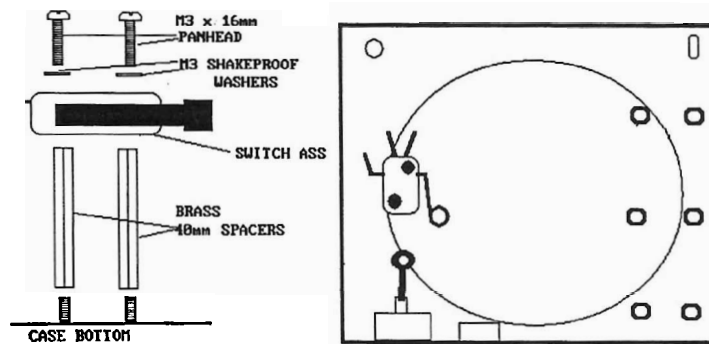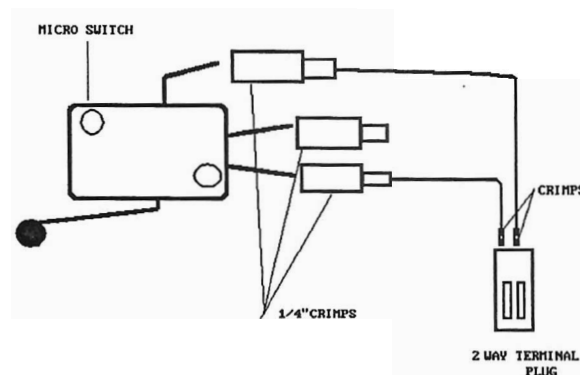

WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	28

8. SPARE PARTS

Exploded view

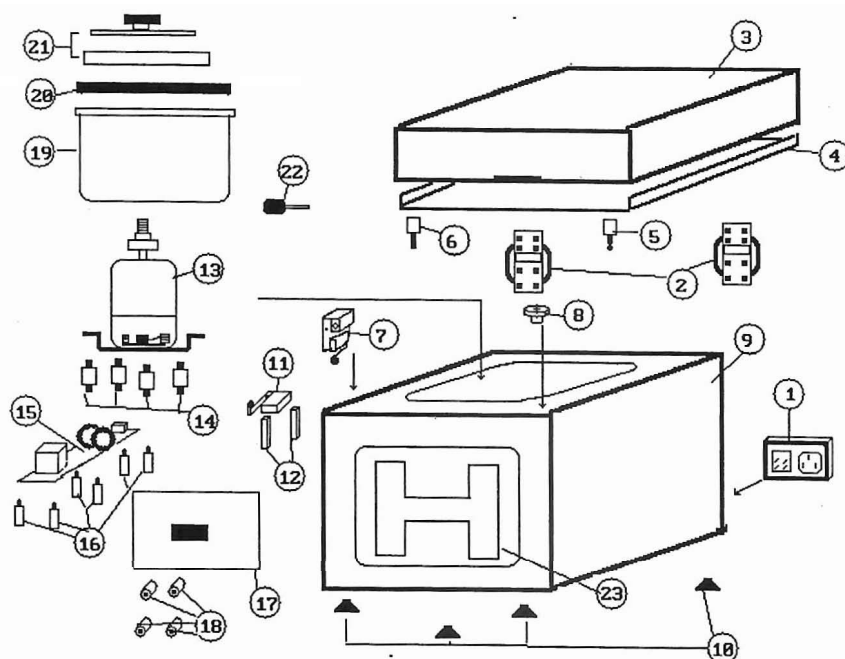

No	Cat No	DESCRIPTION
1.	11998-00	Input Socket Mains 240v
2.	11986-00	Hinges (Metal) Pr
3.	11982-00	Lid + Reinforcing strip
4.	11983-00	Lid Inner
5.	11984-00	Catch Pin
6.	11985-00	Lock Pin (Solenoid)
7.	12004-00	Solenoid M/switch Bkt Assembly
8.	11715-00	Moulding (Catch Pin)
9.	11935-00	Base
10.	01915-00	Feet Rubber Pkt 4
11.	12001-00	Switch Imbalance Assembly
12.	11963-00	Spacer Brass (Imbalance)
13.	11992-00	Motor Unit Assembly
14.	01944-00	Avm mounts Pkt 4
15.	11994-00	PCB Mains/Filter
16.	16522-00	Stand off Pkt 6
17.	11995-00	PCB Control
18.	19023-00	Spacer PCB Pkt 4
19.	11957-00	Bowl
20.	11767-00	Lid Seal
21.	01971-00	Rotor 24 place Assembly
22.	11891-00	Release Key
23.	11939-00	Overlay (H)

WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	29

8.

SERVICE**CONTROL PCB .**

358	SO8	358	Total 1
5A RELAY	RL1	FARNELL 431-382 RL2 RL3	Total 2
7-SEG	HEAD10	HDSP-5501 DG1 DG2 DG3 DG4	Total 4
74HCT373	SO20	74HCT373 IC2	Total 1
74HCT374	SO20	74FCT373 IC4	Total 1
		74HCT374 IC3	Total 1
7805	TO220	7805 VR1	Total 1
87C750	DIL24.3	87C750 IC1	Total 1
BC635-NSC	TO92	BC635-NSC TR1	Total !
		N/F TR9	Total 1
BRIDGE	BR-WO5	W01 BR1 BR2	Total 2
BUZ73L	TO220	BUZ73L Q2	Total 1
C0805	0805	100N C1 C4 C6 C24 C25 C26 C27 1N	Total 7
		C7 C8 C10 C15 C16 C17 C18 C19 C20 C21 C22	Total 7
C1206	1206	10PF C13 C14	Total 2
CAP	CAPR4	0.1uF 400v C23	Total !
CAP+	CAPR15D3	100uF 50v C5	Total 1
		220uF 25v C3	Total 1
CAP+	CAPR1D2	10uF 16v C11	Total 1

WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	30

8.

SERVICE

CONTROL PCB

CAP+	CAPR2D5	1000uF 25v C2	Total 1
FIXINGM4	FIXINGM4	M4 FIX1 FIX2 FIX3 FIX4 FIX5 FIX6 FIX7 FIX8	Total 8
FUSE	FUSE20MM	1.6A T FS1	Total 1
HC18S	XTAL-H	12MHz XT1	Total 1
HEATFIN	HF-TV5	HEATFIN HF1	Total 1
LED	LEDR1	LD5	Total 1
LED BAR 8	DIL16	LED BAR LED3	Total 1
LL4148	MINIMELF	LL4148 D1 D2 D3 D4 D5 D6 D7 D8	Total 8
MOV	VDR-V	MOV MV1	Total 1
NPN_SOT23	SOT23	NPN TR1 TR2 TR3 TR4 TR5 TR6 TR7 TR8 TR10 TR11	Total 9
PUSHBUTTON	SWITCH	SW1 SW2 SW3 SW4 SW5	Total 5
R FUSE	RESA5D1	100R 0.5W FUS R37	Total 1
R0805	0805	100K R25 R27 R41 R45 R54 R56 10K R9 R55 330R R2 R3 R4 R19 R20 R21 R23 R24 R26 R28 R29 R30 R31 R32 R33 R34 R35 R36 R39 R40 R44 R49 R52 470K R47 R53 47K R5 R6 R7 R8 R10 R11 R13 R14 R15 R16 R17 R18 47R R22	Total 6 Total 2 Total 23 Total 2 Total 12 Total 1

WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	31

8.

SERVICE

CONTROL PCB



RLY-2PCO	RL-KEY	KEY RELAY RL1	Total 1
R_0.25W	RESA5D1	100K 0.25W R48 R50 3R0 0.25W R38 N/F 0.25W R46 R51	Total 2
			Total 1
			Total 2
R_1W	RESA6D15	1R 1W R42	Total 1
R_1W	RESA7DA	10R 2.5W R43	Total 1
R_2.5W	RESA7DA	2R2 2.5W R1	Total 1
SIL2	SIL2	SIL2 CN3 CN4 CN5 CN6	Total 4
SIL3	MET3WAY	MET3WAY CN7	Total 1
SIL3	SIL3	N/F CN2	Total 1
SIL4	SIL4	CN1	Total 1
SIL6	MET6WAY	MET6WAY CN8	Total 1
TEST_PAD	TP1	TP1	Total 1
TLP3062	DIL6	TLP3062 ISO1	Total 1
TRIAC	TO220	Q1	Total 1

WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	32

8.

SERVICE

CONTROL PCB LAYOUT

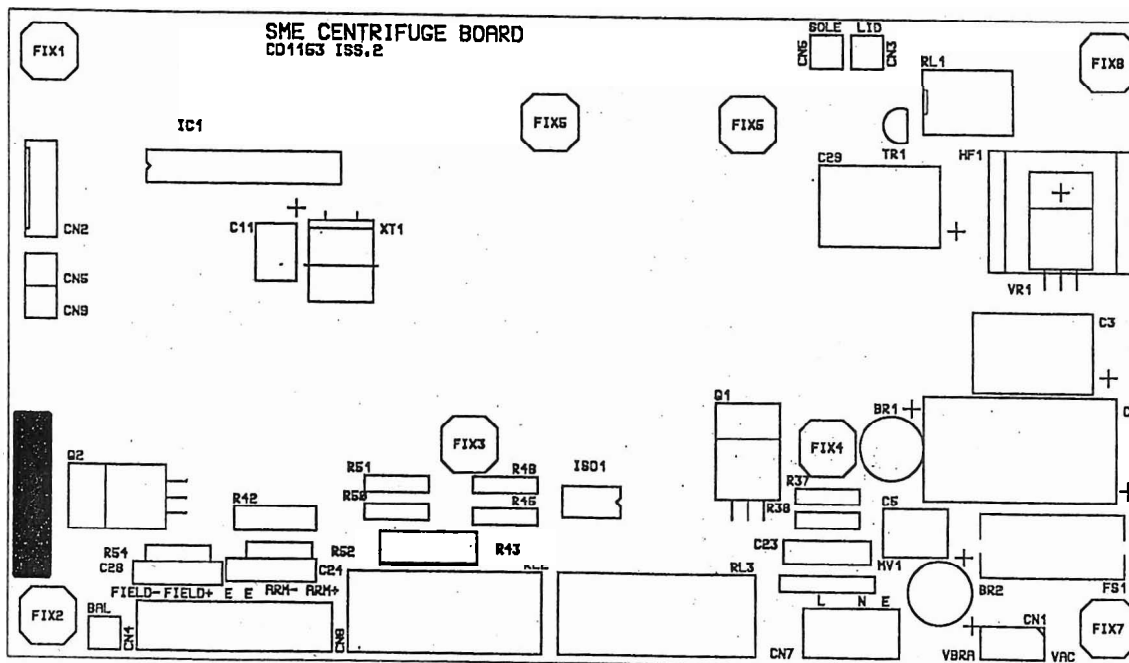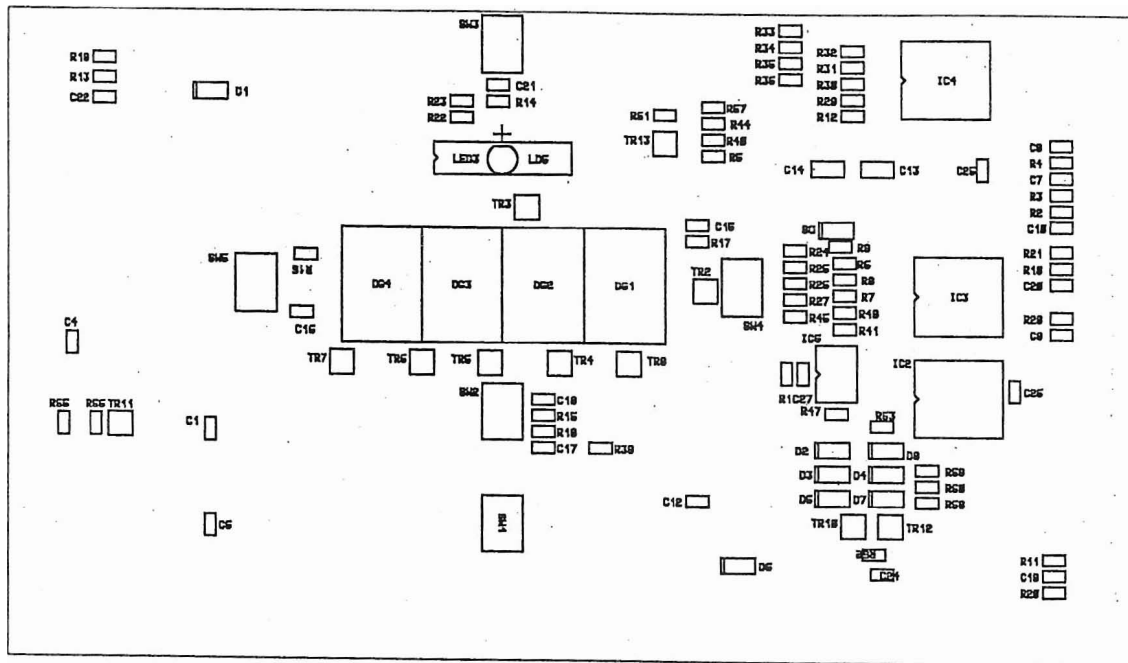


WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	33

8.

SERVICE

PSU CIRCUIT

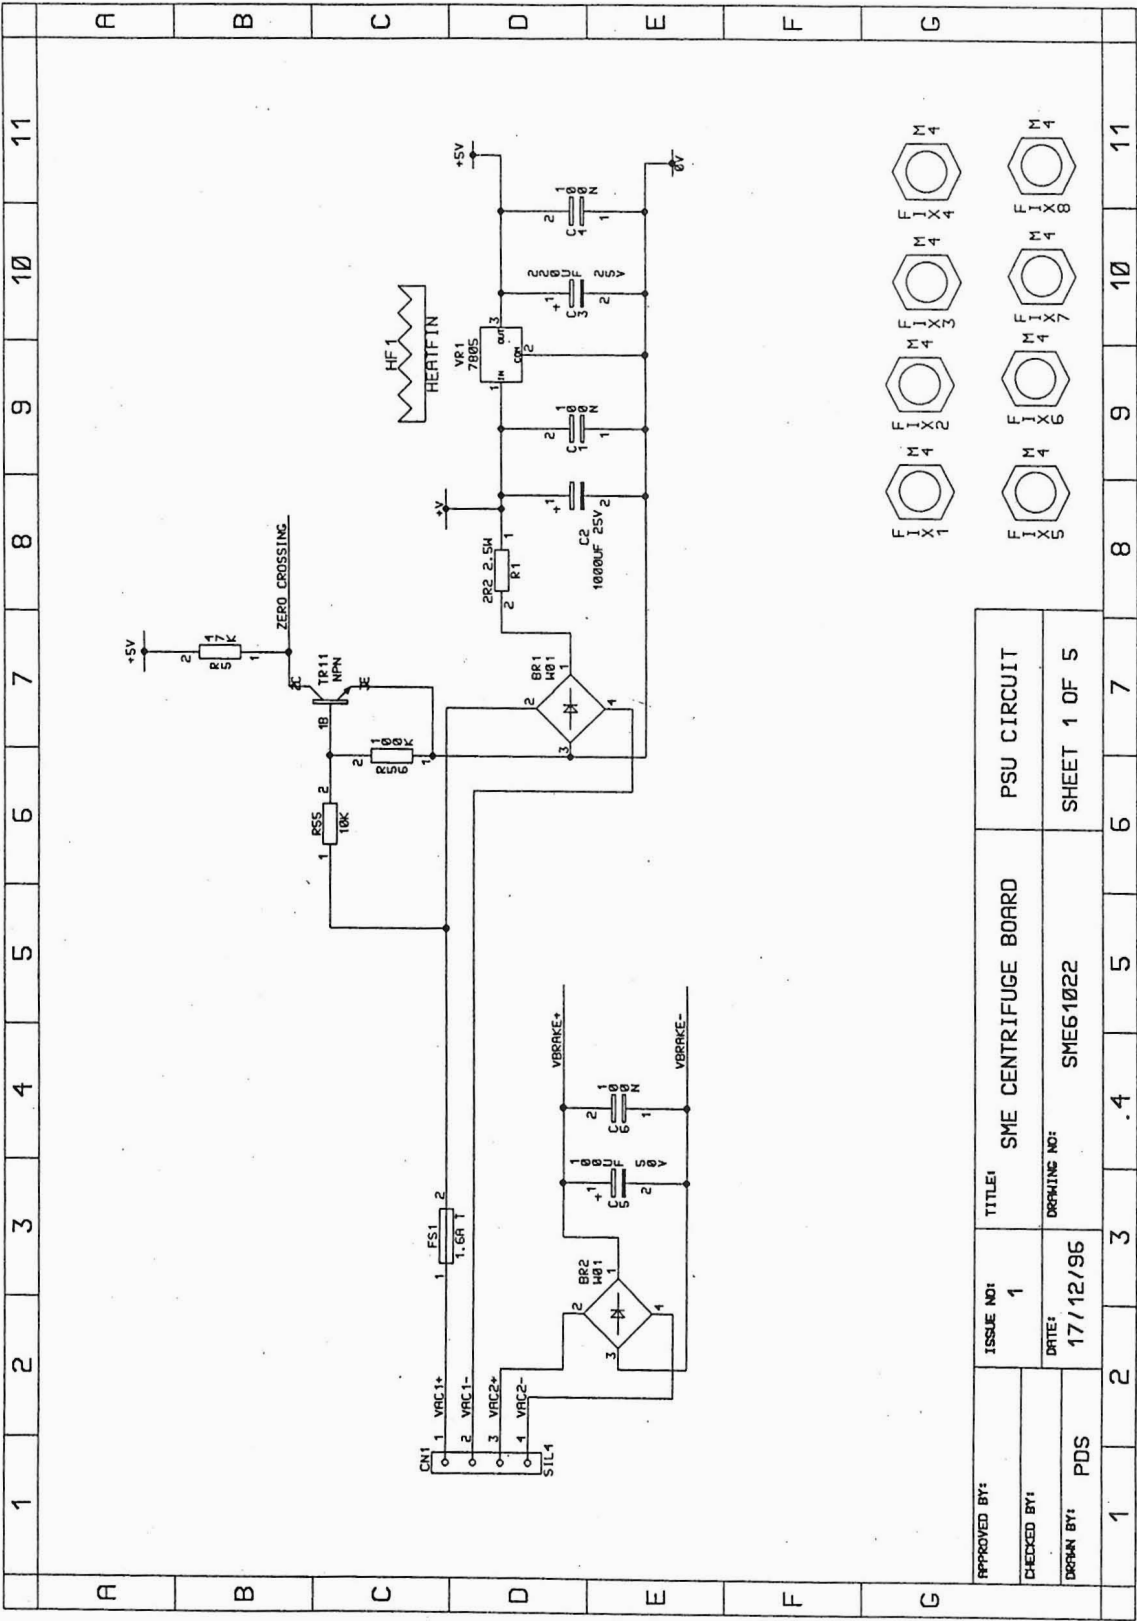


WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	34

8.

SERVICE

CPU CIRCUIT

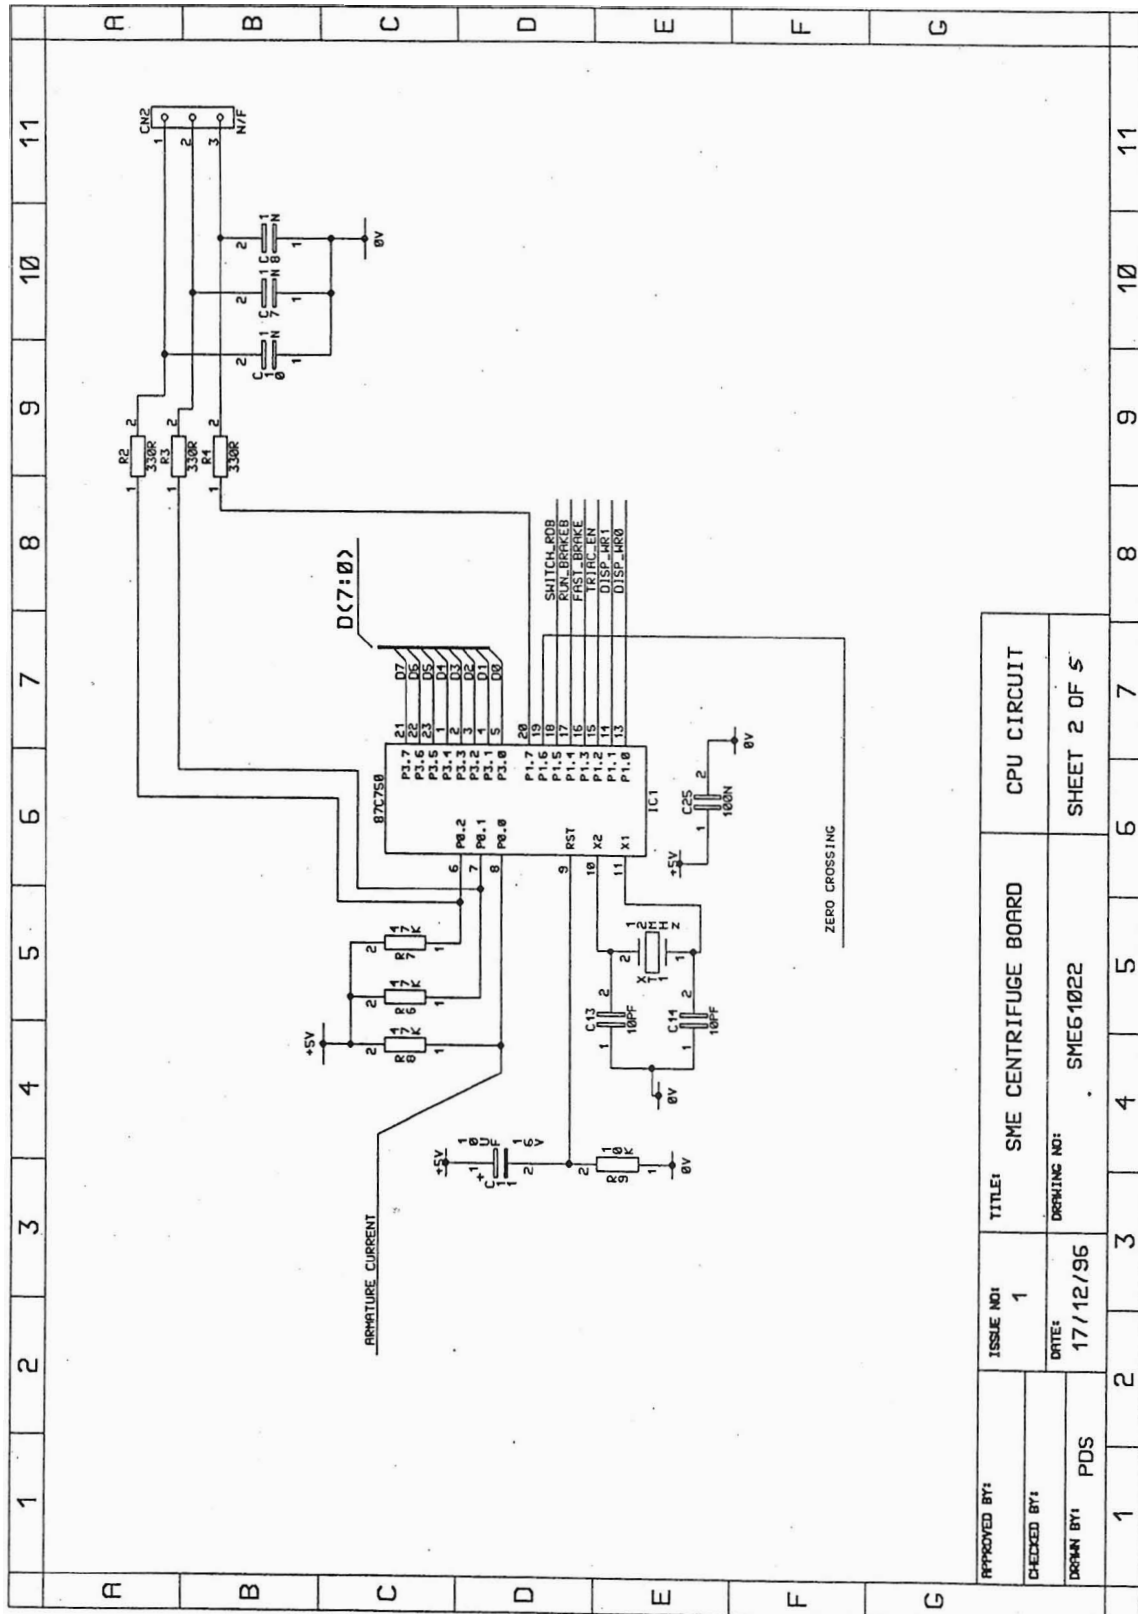


WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	35

8.

SERVICE

SWITCHES INPUTS

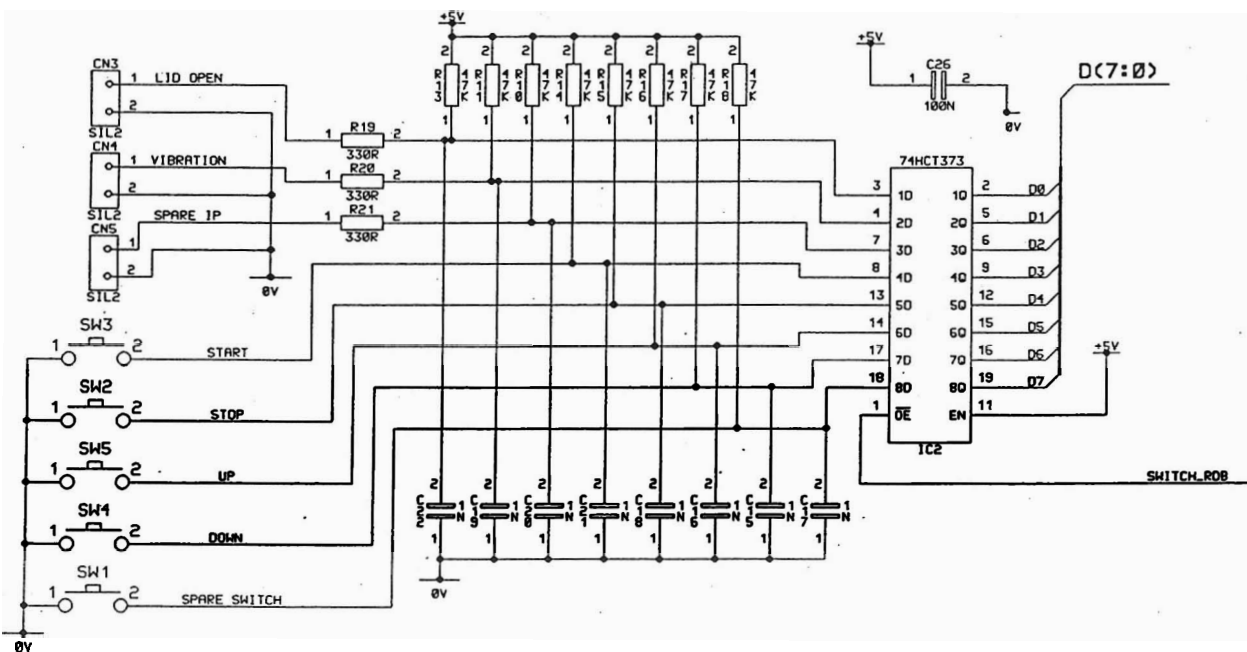

APPROVED BY:	ISSUE NO:	TITLE:	SWITCHES INPUTS
CHECKED BY:	1	SME CENTRIFUGE BOARD	
DRAWN BY:	DATE:	DRAWING NO:	SHEET 3 OF 5
PDS	17/12/96	SME61022	


WRITTEN BY: D.GROVE
APPROVED BY: J/DINNING

DATE
1/7/97

ISSUE
A

PA
36

DISPLAY CIRCUITS

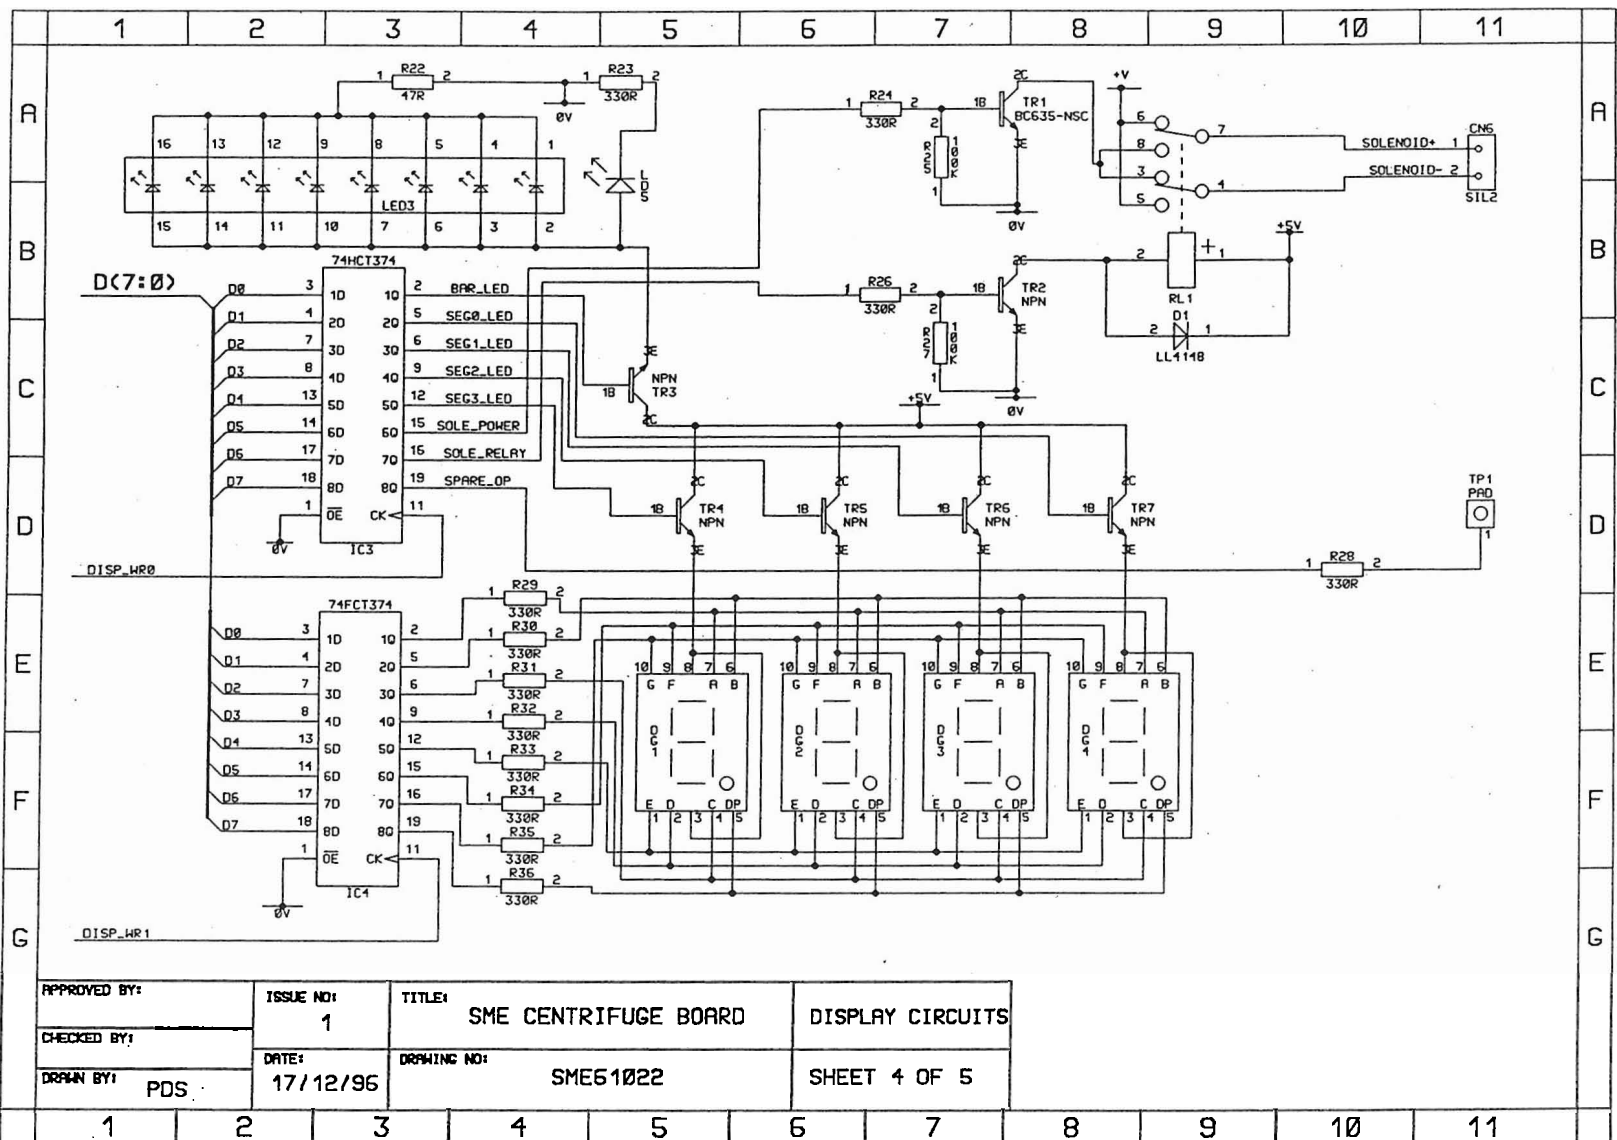

WRITTEN BY: D.

DATE

ISSUE

REVISION

PAGE

APPROVED BY: J/ ING

1/7/97


A

0

37

SERVICE

MOTOR CONTROL

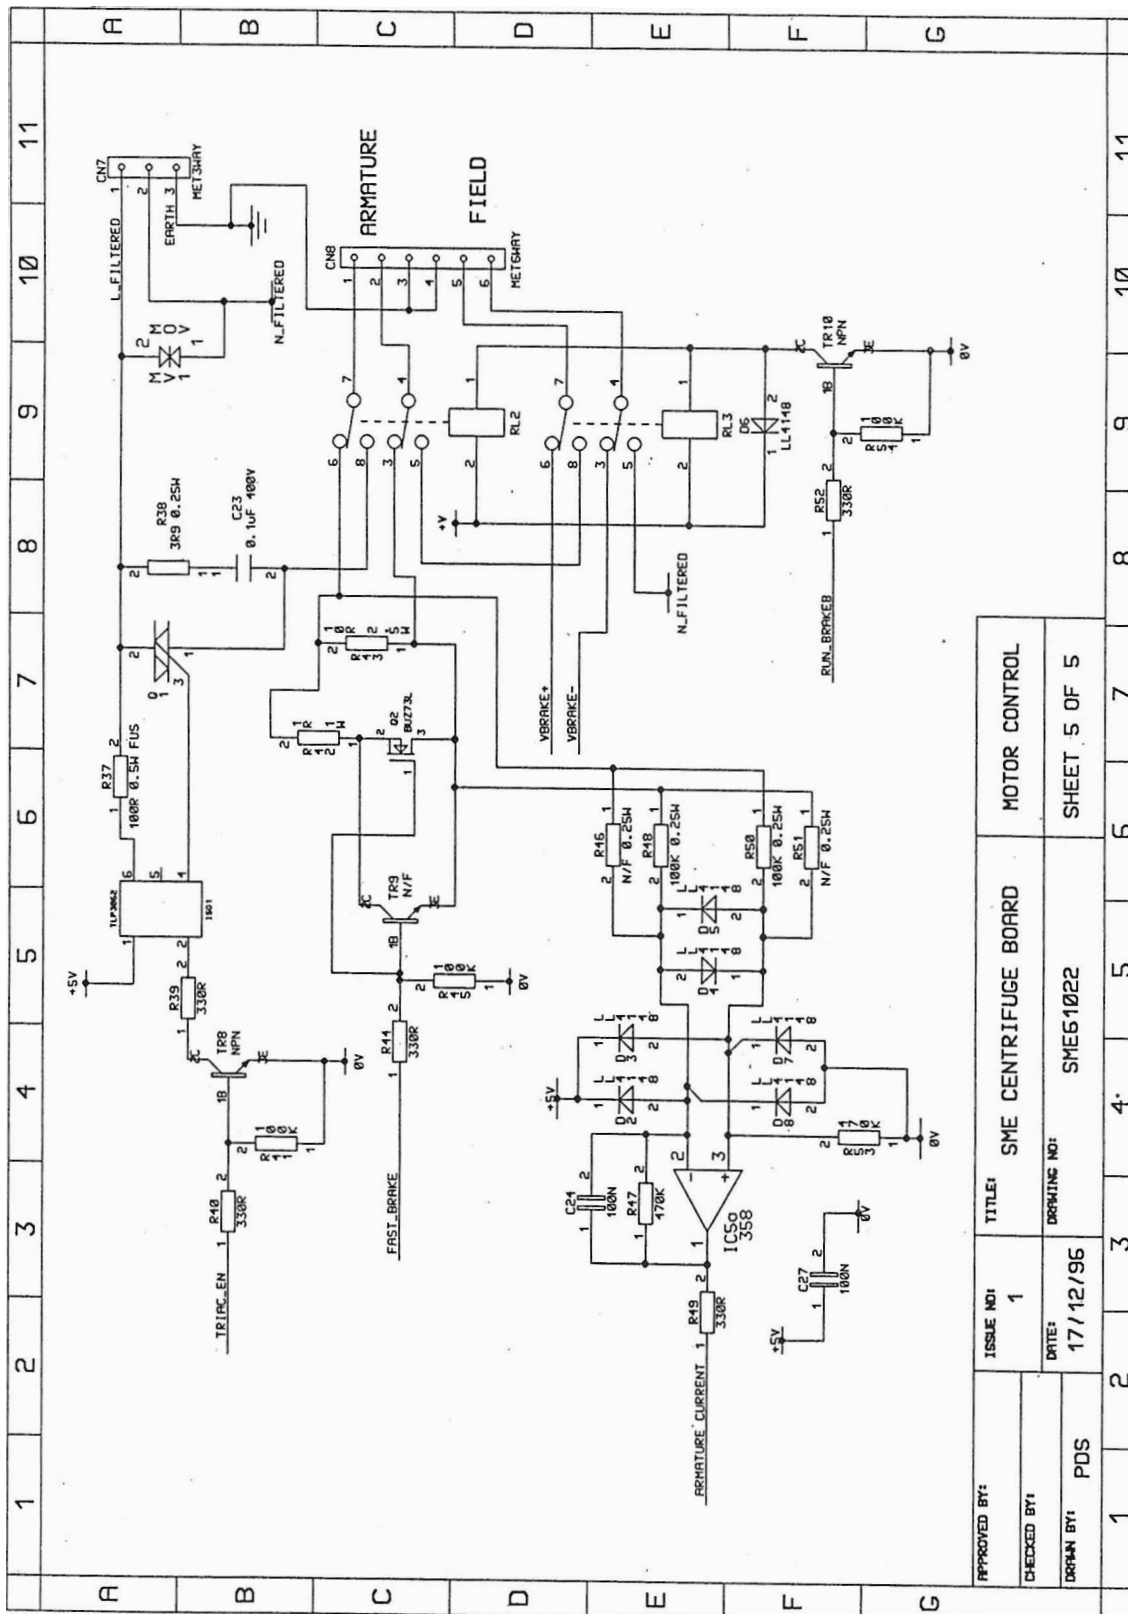

WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	38

8.

SERVICE**FILTER BOARD**


COIL	COIL1	2.4mH 500W IND1 IND2	Total 2
FIXINGM4	FIXINGM4	M4 FIX1 FIX2 FIX3 FIX4 FIX5 FIX6 FIX7 FIX8 FIX9 FIX10 FIX11 FIX12	Total 12
RESISTOR 0.25W	RESAD1	OR R1 R2 R3 470K R4	Total 3 Total 1
SIL3	SIL3	CN1 CN2	Total 2
SIL4	SIL4	CN3	Total 1
TRANSFORMER	TX1	12VA 9-0-9	Total 1
X2_CAP	CAPR11	1UF X2 C1	Total 1
Y2_CAP	CAPR6	4N7 Y2 C2 C3	Total 2

WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	39

8.

SERVICE

FILTER/MAINS PCB LAYOUT

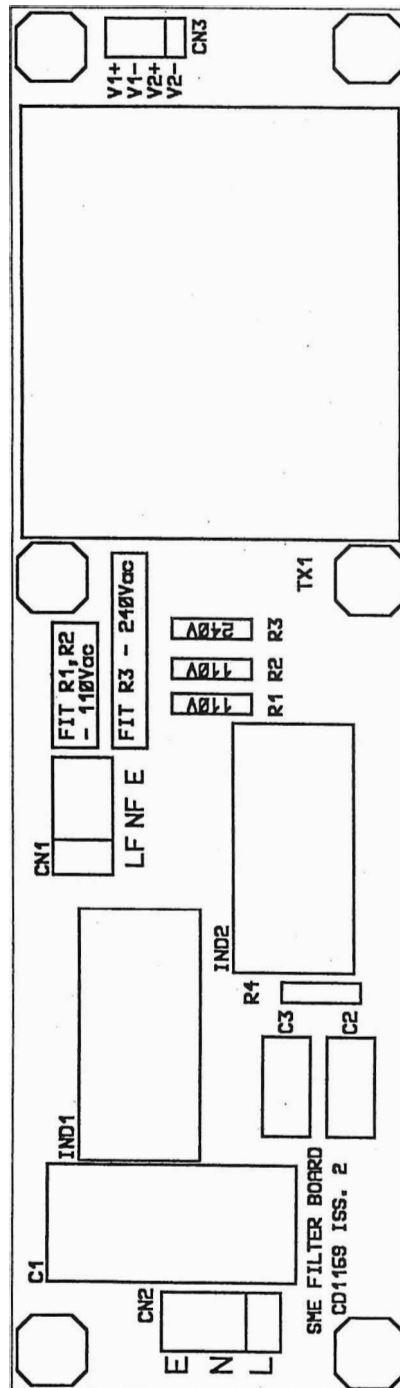


WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	40

8.

SERVICE

FILTER BOARD

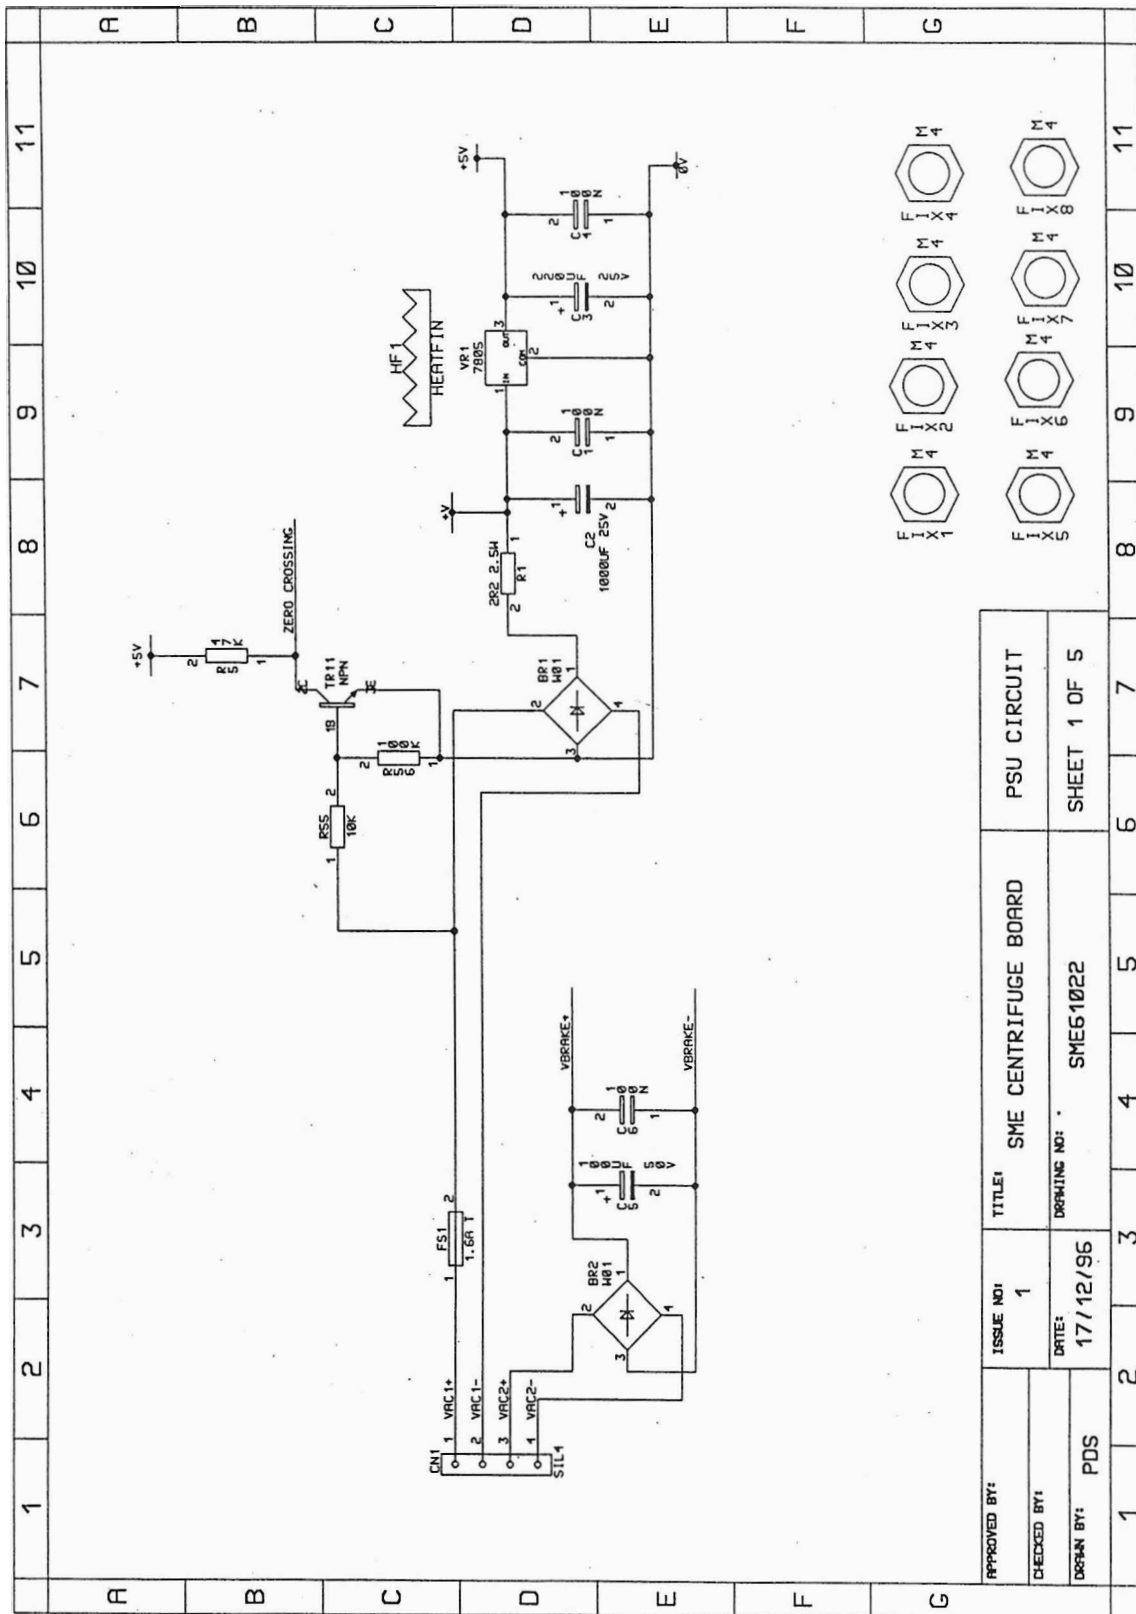

WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	41

9.

WARRANTY & SERVICE**WARRANTY**

This instrument is guaranteed for both parts and labour for a period of 12 months from date of the delivery.

The manufacturer accepts responsibility for the effect on safety, reliability and performance of the instrument only if:-

- a) Repair and/or adjustments are carried out only by person or persons authorized to do so by the manufacturer
- b) The electrical supplies of the building where the instrument is used comply with "wiring regulations" published by the Institute of Electrical Engineers.
- c) The instrument is used in accordance with the instructions for use as detailed in this manual.

SERVICE

With good housekeeping and regular servicing this instrument should give trouble-free operation for many years.

The instrument should be serviced every 6 months. Details are available from Hawksley & Sons service department on 01903 752815 (Fax - 01903 766050).

Further technical information, including full component lists, recommended spares lists, circuit diagrams, etc., may be made available on request from the Hawksley service department on 01903 752815 (Fax - 01903 766050).

Hawksley & Sons Ltd will not accept liability for non-conformance to the current recommendations for use of this product which may lead to injury or other loss.

WRITTEN BY: D.GROVE	DATE	ISSUE	REVISION	PAGE
APPROVED BY: J/DINNING	1/7/97	A	0	42